GO GO PONY KIDDIE RIDE
USER MANUAL

Open   the   back

Move & change value
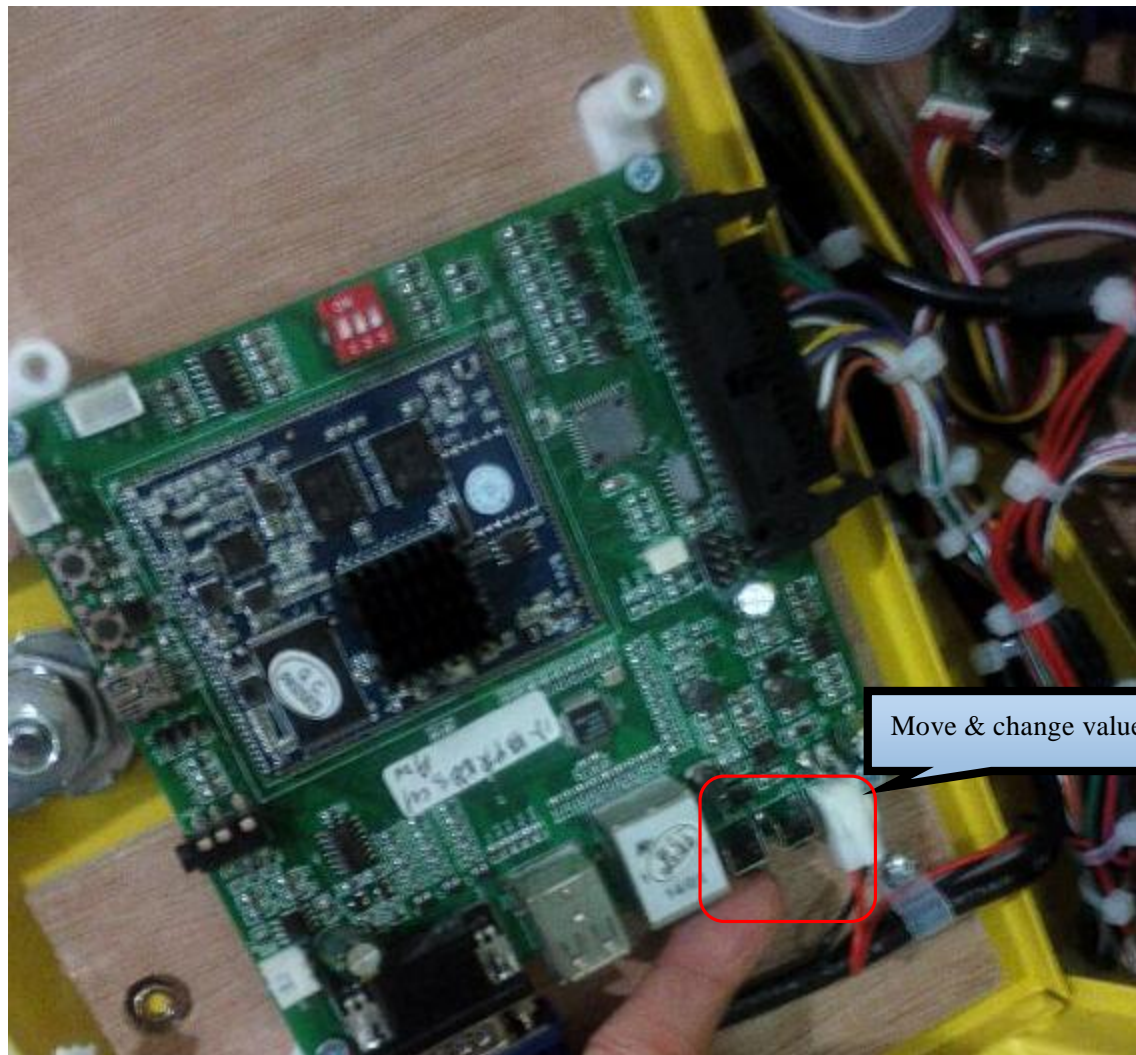
You can see two buttons and just push them

Setting

Coins Per Credit: 2   0-5,0 for free

Time Per Credit: 180s   60s-180s

Game Volume: 100

Background music Volume: 50

Ticket Per Credit: 0   0 for no ticket

Total Ticket: 0

Total Coins: 04

Exit with Save

Exit without Save

Default Setting   Delete income record